

Beeper Tone

Parameter # 145

SSI # 91h

 
Scan one of the following bar codes to select a beeper tone for the good decode beep.



Disable Tone
(3)



Low Tone
(2)



***Medium Tone**
(1)



High Tone
(0)



Medium to High Tone (2-tone)
(4)