

NLS-HR32BT 비프음



@SETUPE1

Enter Setup



@GRBVOL0

**** Loud**



@GRBVOL1

Medium



@GRBVOL2

Low



@SETUPE0

**** Exit Setup**